



# Thermaltake Pacific TF1 Temperature and Flow Indicator

\$49.99

## Product Images



Temperature and Low-Flow  
 Warning Alert



Fahrenheit      Celsius  
 Temperature Display



Front View      Back View



## Short Description

---

Thermaltake Pacific TF1 Temperature and Flow Indicator is a 2-in-1 design, the indicator detects coolant temperatures ranging from 0°C to 99°C (32°F -210°F) and displays the value in unit Celsius or Fahrenheit. Featuring temperature and low-flow warning alert, compatibility with any G1/4 fittings and easy installation, the gadget ensures the liquid cooling system to work within optimal temperature and flow operating ranges and unleashes the performance of your PC.

## Description

---

Thermaltake Pacific TF1 Temperature and Flow Indicator is a 2-in-1 design, the indicator detects coolant temperatures ranging from 0°C to 99°C (32°F -210°F) and displays the value in unit Celsius or Fahrenheit. Featuring temperature and low-flow warning alert, compatibility with any G1/4 fittings and easy installation, the gadget ensures the liquid cooling system to work within optimal temperature and flow operating ranges and unleashes the performance of your PC.

## Features

---

Tt LCS Certified is a Thermaltake exclusive certification applied only to products that pass the design and hardcore enthusiasts standards that a true LCS chassis should hold to. The Tt LCS certification was created so that we at Thermaltake can indicate to all power users which chassis have been tested to be best compatible with extreme liquid cooling configurations, ensuring you get the best performance from the best features and fitment.

## Celsius /Fahrenheit Temperature Display

The Pacific Temperature Sensor offers temperature readings of which the unit can be switched between Celsius and Fahrenheit, allowing users to easily track the temperature levels of the coolant.

## Temperature and Low-Flow Warning Alert

The Pacific TF1 Temperature and Flow Indicator is equipped with temperature and low-flow warning alert functions. The indicator continuously senses and sends beeps as an alert when the coolant temperature is rising above the value users have set, and when the coolant flow is below the value that the users have set. The default low-flow warning alert is set to go off at 60(L/hr) and 45°C for exceeding temperature.

## High quality LCD monitor

Pacific TF1 Temperature and Flow Indicator is equipped with high quality LCD monitor that guarantees monitor durability and clear display.

## Easy Installation

Coming with easy, user-friendly setup, the Pacific TF1 Temperature and Flow Indicator allows users to obtain the ultimate performance from their liquid cooled PC by simply connecting the power cable to it.

### \*Note:

1. Please check your system immediately to prevent any hardware damages when the alert is triggered. The default alarm temperature is 45°C and 60(L/hr) for coolant flow.
2. Please check the melting point or maximum operating temperature of each cooling component before you manually adjust the temperature threshold.

## Specifications

---

P/N	CL-W219-PL00BL-A
Dimension	35.5 H x 44.6 W x 60 L (mm)
Weight	100 g
Material	Copper + ABS
Rated Voltage	5V
Power Input	0.4W
Screw Thread	G 1/4
Connector	SATA Power

## Additional Information

---

Brand	Thermaltake
SKU	CL-W219-PL00BL-A
Weight	0.3000
Color	Black
Material	Copper

