



Lian Li TR-5B - Digital 5.25" LCD Thermometer / Fan Controller - Black

Special Price
\$49.95 was
\$59.95

Product Images



Short Description

Lian Li moves into the digital age with this totally redesigned and modernized LCD temperature display and fan controller. This 5.25" bay device has speed detection and control for 4 fans. It shows a multitude of other display information including the time and can also set off an alarm if there are any fan failures. This is a HUGE improvement over the previous T Series and looks fantastic in any Lian Li case!

Description

Lian Li moves into the digital age with this totally redesigned and modernized LCD temperature display and fan controller. This 5.25" bay device has speed detection and control for 4 fans. It shows a multitude of other display information including the time

and can also set off an alarm if there are any fan failures. This is a HUGE improvement over the previous T Series and looks fantastic in any Lian Li case!

Features

- Automatic / Manual Fan Speed Curve Control
- Huge 5.25" LCD Display
- 4 sets of Fan Speed Detection
- 4 sets of Temperature Detection
- Alarm for fan Error / Over temperature
- Icon shows Power On/ HDD access on LCD

Specifications

TR-5 Function Instruction

1. Temperature/ Fan Speed Display:

a. Press C key to switch between four different fan speed/ temperature displays. The switch order is as follows: Fan1→Fan 2→Fan 3→Fan 4 For corresponding fans; CPU→VGA→SYS1→SYS2 for corresponding temperature sensors reading.

Note: Temperature range: 0 degrees to 99 degrees. Accuracy: +/-2 degree.

b. To switch between C and F temperature display modes with A key.

2. Fan Speed/ Temperature Alarm/ Date / Time Setting

By Press B key for 3 seconds, after the beep sound, you will be enter the setting mode, you can press B key to switch to different functions in order, Fan 1 to 4, Temperature Alarm CPU to SYS2, date, and time.

And only using A key to adjust the setting

a. Fan Speed adjustment:

As factory setting , all settings set to automatic, the fan speed will be automatically adjusted when temperature changes. (Fan 1 - CPU /Fan 2 - VGA/ FAN3 - SYS1/ Fan4 - SYS2). To adjust the fan speed manually, hold the B key for 3 seconds, and after the beep sound, using A key to change the speed setting. There are 6 modes; S-A (Automatic) to S-L (Low Speed) to S-1 to S-2 to S-3 to S-H (High Speed)

Note: when fan fail, the buzzer will start beeping, and the display backlight will turn into red, and start flashing until the faulty has been removed. If the fan failed before the system power on, the TR-5 won't be able to detect the fail fan.

b. Temperature Alarm Adjustment:

As Factory Setting, temperature alarm setting as CPU : 70C/158F; VGA: 60C/140F; SYS1&2: 50C/122F

The adjustment range from 40C/104F to 70C/194F

when the reading over the limit, the buzzer will start beeping, and the display backlight will turn into red, and start flashing until the faulty has been removed.

Only Use DC 12V 0.45Amax 3pin fan.

c. Time Adjustment:

24-hour time display and perpetual calendar functions

a. Year adjustment: press B key→click B key 9 times until the characters of the year start flashing→press A key to adjust

- b. Month adjustment: press B key→click B key 10 times until the characters of the month start flashing→press A key to adjust
 - c. Date adjustment: press B key→click B key 11 times until the characters of the date start flashing→press A key to adjust
 - d. Hour adjustment: press B key→click B key 12 times until the characters of the date start flashing→press A key to adjust
 - e. Minute adjustment: press B key→click B key 13 times until the characters of the date start flashing→press A key to adjust
3. The module comprises “HDD” status indication function of the main board. HDD symbol will rotate while receiving the reading signal of the HDD.
4. RESET
Press D key to reset to default settings

Additional Information

Brand	Lian-Li
SKU	TR-5B
Weight	1.5000
Color	Black
Device Type	Fan Controller
Bay Size	5.25" Bay
Special Price	\$49.95

